


How to config time stamp.

1. Go to NVR-0432 cilck "Setup"

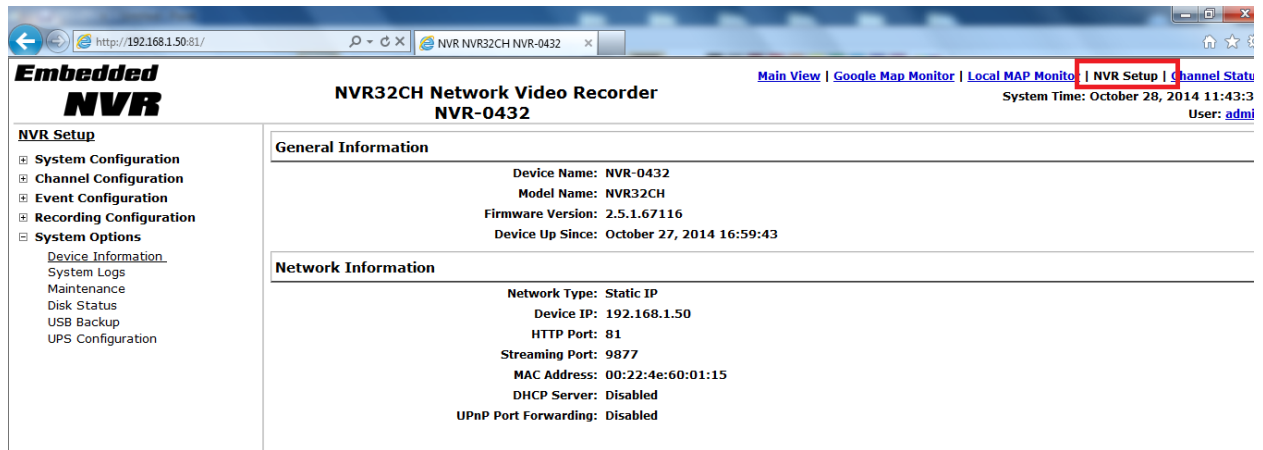

The screenshot shows the Embedded NVR web interface for an NVR32CH Network Video Recorder (NVR-0432). The browser address bar shows the URL http://192.168.1.50:81/. The page title is "NVR32CH Network Video Recorder NVR-0432". The system time is "October 28, 2014 11:43:3" and the user is "admin". The "NVR Setup" menu item is highlighted with a red box. The left sidebar contains the following menu items: System Configuration, Channel Configuration, Event Configuration, Recording Configuration, System Options, Device Information, System Logs, Maintenance, Disk Status, USB Backup, and UPS Configuration. The main content area displays "General Information" and "Network Information".

General Information	
Device Name:	NVR-0432
Model Name:	NVR32CH
Firmware Version:	2.5.1.67116
Device Up Since:	October 27, 2014 16:59:43

Network Information	
Network Type:	Static IP
Device IP:	192.168.1.50
HTTP Port:	81
Streaming Port:	9877
MAC Address:	00:22:4e:60:01:15
DHCP Server:	Disabled
UPnP Port Forwarding:	Disabled

2. Go to Channel Configuration > OSD Setting
 - 2.1. Select Channel
 - 2.2. Enable Display OSD
 - 2.3. Enable Show Time

**Embedded
NVR**

NVR32CH Network Video Recorder NVR-0432

NVR Setup

- System Configuration
- Channel Configuration
 - Channel Setting
 - OSD Setting
- PTZ Setting
- E-Map Setting
- Event Configuration
- Recording Configuration
- System Options

OSD Setting

Channel: 1: FCS-3101

- Do not display OSD
- Display OSD

Text Display Options

Show Time

Show FPS

Show Text:

OSD Position

Use relative position X: % Y: %

Display at

3. Please use the NVR media player for play the video as the link below.
<http://download.level1.com/level1/other/NVRMediaPlayer.zip>
4. After you play, just click the OSD button then you can see the time stamp.

