

How to Connect IP Camera to NVR-0508

คู่มือการ Add กล้องเข้า NVR-0508 แบบ Manual





Activate Windows Go to PC settings to activate Windows.

Step 1: ทำการเข้า NVR-0508 โดย Username: admin และ Password: (ตามที่ได้ทำการตั้งไว้ หากเป็นทางเราได้ทำการตั้งค่าไว้ Password จะเป็น indi3210)

		Live V	iew I	Playback	Picture	Configura	ation						
ç) Local	IP Camera											
Ē	System		IP Camera		Add Modify		Delete	Quick Add Cust	om P Activation				
	System Settings Maintenance		Channel No.	IP Address	Channel No.	Management Port	Security Weak	Status	Protocol HIKVISION	Connect			
	Security		D02	192.168.254.3	1	8000	N/A	Offline(IP camera	HIKVISION				
	Camera Management		D03	192.168.254.4	1	8000	N/A	Offline(IP camera	HIKVISION				
¢	User Management		D04	192.168.254.5	1	8000	N/A	Offline(IP camera	HIKVISION				
	Video/Audio		D05	192.108.254.6	1	8000	N/A	Offline(IP camera	HIKVISION				
1	a Image		D07	192.168.254.8	1	8000	N/A	Offline(IP camera	HIKVISION				
Ē] Event		D08	192.168.254.9	1	8000	N/A	Offline(IP camera	HIKVISION				
	Storage												
6	Vehicle Detection												
8	VCA												

Step 2: เข้าไปที่เมนู Configuration -> System -> Camera Management แล้วเลือกรายการที่ต้องการเพิ่มกล้องแบบ Manual เมื่อเลือกรายการแล้วให้กด Modify

Step 3	Live View	Playback	Picture	Configuration		👤 admin 👔 Help 🕞 Logout
🖵 Local	IP Camera					
E System	IP Camera			Modify Delete C		
System Settings	Channel N	o. IP Address	Channel No. Mana	10.0	~	
Maintenance				Si	^	
Security	D02	192.168.254.3	1	8 IP Camera Address	192.168.1.65	
Camera Management	D03	192.168.254.4	1	8(Protocol	ONVIF V	
User Management	D04	192.168.254.5	1	8(Management Port	8000	
Network	D05	192.168.254.6	1	8 Channel No.	1	
Video/Audio	D06	192.168.254.7	1	8 User Name	admin	
🔝 Image	D07	192.168.254.8	1	8 Password	•••••	
Event	D08	192.168.254.9	1	8 Confirm	•••••	
Storage				Transfer Protocol	Auto	
R Vehicle Detection				Adding Method	Manual	
Ko VCA					OK Cancel	

Step 3: กรอกรายละเอียดของกล้องที่ต้องการเพิ่มเข้าไปใน NVR-0508 ให้ถูกต้อง หลังจากนั้นกดปุ่ม OK ระบบจะทำการค้นหาผ่าน IP address ของกล้องที่ได้ทำการกรอกรายละเอียดไว้ หากรายละเอียดที่ให้มาถูกต้องระบบจะทำการเพิ่มกล้องเข้าในระบบ



Step 4:

เมื่อเพิ่มกล้องเข้าในระบบเสร็จแล้วสามารถดูรายการได้จากหน้า Live View รายการจะถูกแสดงไว้ทางด้านซ้ายหากต้องการดูภาพให้ทำการ Double Click ที่รายการที่ต้องการ